

GARY E. JONES
Attorney Docket No. BOEI-1-1011
SNAP-IN WINDOW ASSEMBLY AND METHOD
Filed: October 25, 2001
Serial No. 10/047,186
Sheet 1 of 6
Black Lowe & Graham, PLLC
(206) 381-3300

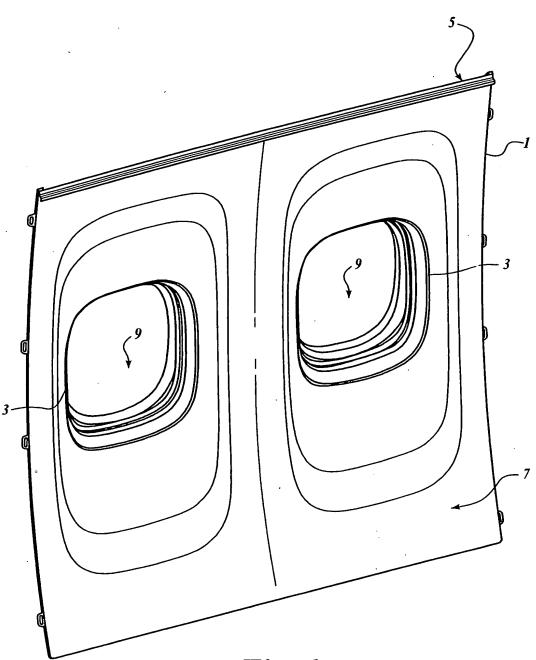


Fig. 1.

GARY E. JONES
Attorney Docket No. BOEI-1-1011
SNAP-IN WINDOW ASSEMBLY AND METHOD
Filed: October 25, 2001
Serial No. 10/047,186
Sheet 2 of 6
Black Lowe & Graham, PLLC
(206) 381-3300


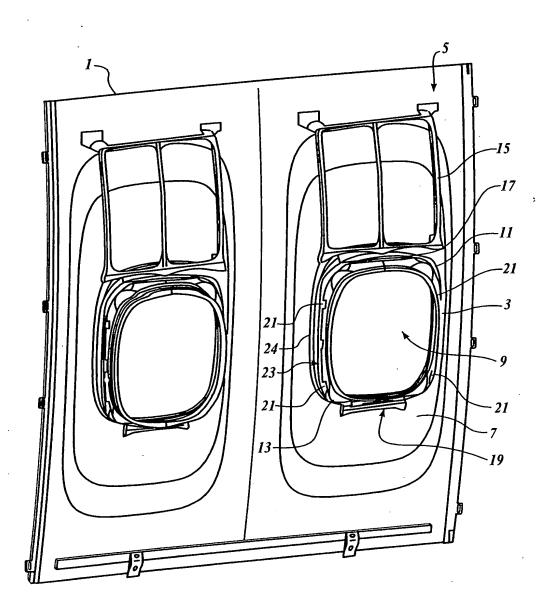


Fig. 2.




GARY E. JONES
Attorney Docket No. BOEI-1-1011
SNAP-IN WINDOW ASSEMBLY AND METHOD
Filed: October 25, 2001
Serial No. 10/047,186
Sheet 3 of 6
Black Lowe & Graham, PLLC
(206) 381-3300



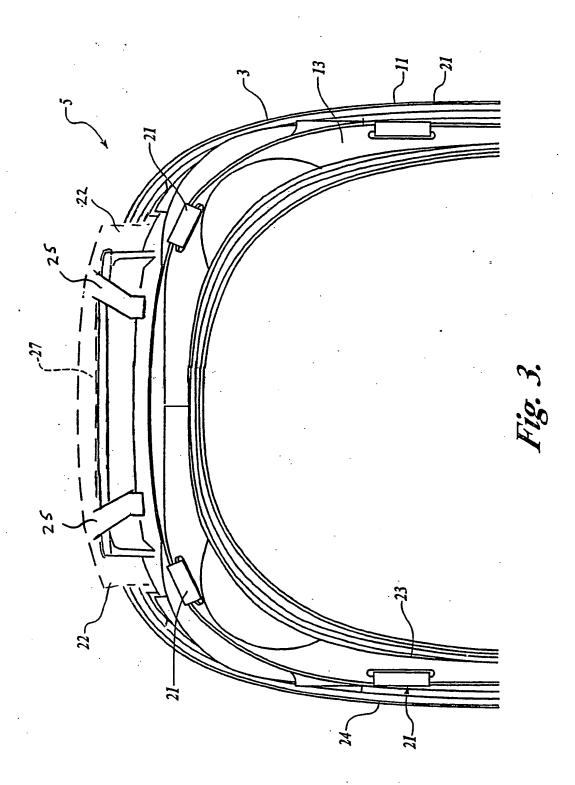

GARY E. JONES
Attorney Docket No. BOEI-1-1011
SNAP-IN WINDOW ASSEMBLY AND METHOD
Filed: October 25, 2001
Serial No. 10/047,186
Sheet 4 of 6
Black Lowe & Graham, PLLC
(206) 381-3300


4/6

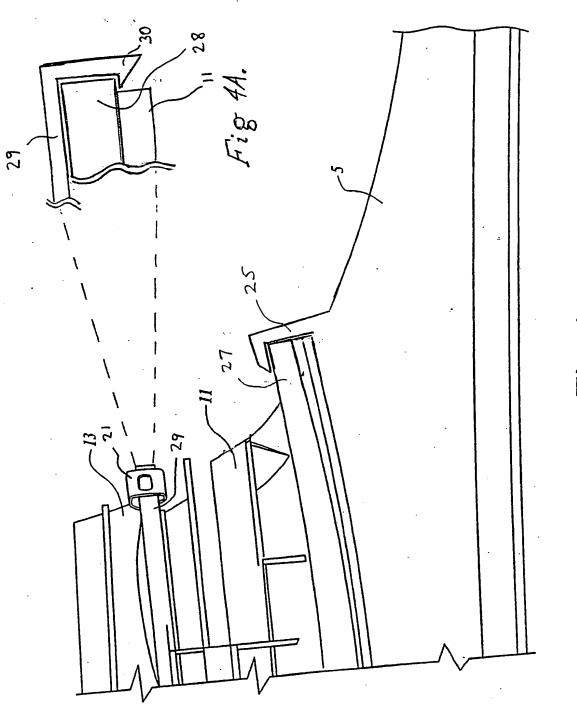

F19. 4.



GARY E. JONES
Attorney Docket No. BOEI-1-1011
SNAP-IN WINDOW ASSEMBLY AND METHOD
Filed: October 25, 2001
Serial No. 10/047,186
Sheet 5 of 6
Black Lowe & Graham, PLLC
(206) 381-3300

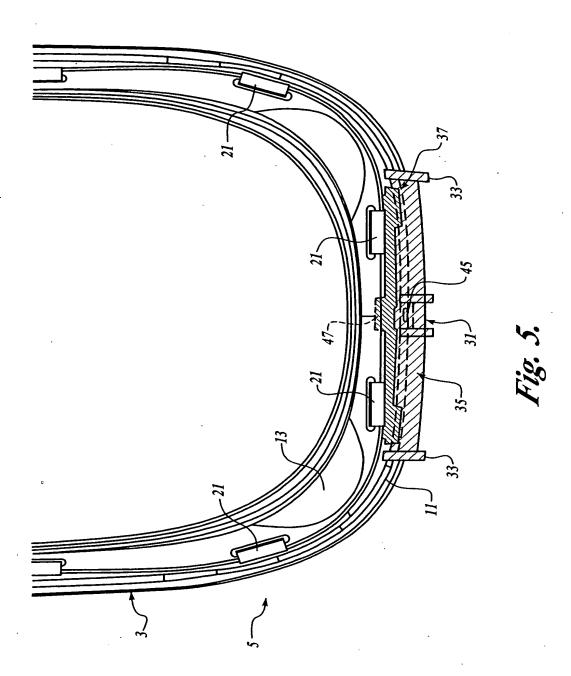



GARY E. JONES
Attorney Docket No. BOEI-1-1011
SNAP-IN WINDOW ASSEMBLY AND METHOD
Filed: October 25, 2001
Serial No. 10/047,186
Sheet 6 of 6
Black Lowe & Graham, PLLC
(206) 381-3300

